
TT RGB Plus Software control interface

Please download TT RGB PLUS from Thermaltake's Official website.
https://www.thermaltake.com/downloads
OS compatibility: Windows 10, Windows 11


SWAFAN EX RGB PC Cooling Fan Software User Interface

CONNECT - CONTROLLER

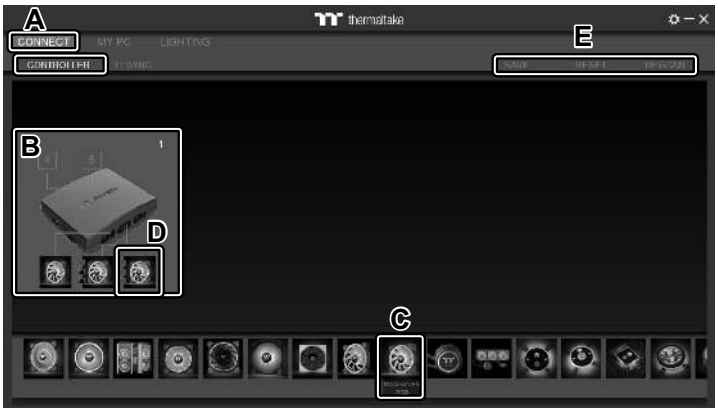

A. After installation of TT RGB PLUS, you can find controllers on the “CONNECT” & “CONTROLLER” page.
B. Click the controller port to make the “SWAFAN EX RGB” fan glow red lighting to pair.
C. Drag and drop to pair the “SWAFAN EX RGB” fan with controller port.
D. Select the number of SWAFAN EX RGB PC Cooling fans installed. (Default is 3 fans)
E. SAVE: Save the controller pairing settings.
RESET: Reset the controller pairing.
RESCAN: Rescan the controllers.


MY PC - FAN SPEED

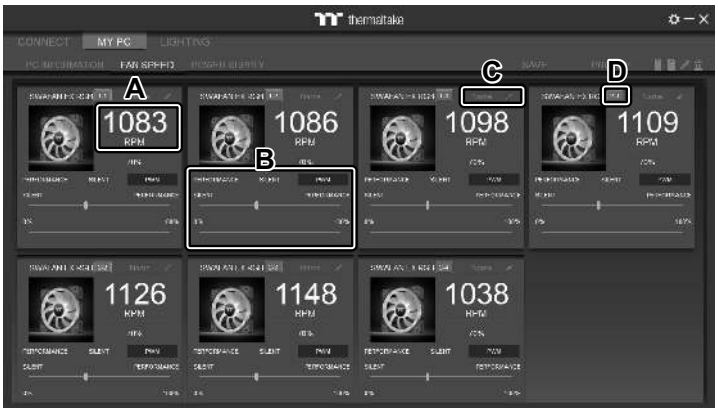

SWAFAN EX RGB PC Cooling Fan Speed Information and PWM Performance Settings.
A. SWAFAN EX RGB real-time fan speed.
B. Fan speed settings
- PERFORMANCE: 0% →100% (1500rpm)
- SILENT: 0% (300~500rpm)
- PWM: Set PWM silent (50%) to PWM performance (100%).

C. NAME: Edit the case fan name.
D. Controller – Port number.

LIGHTING

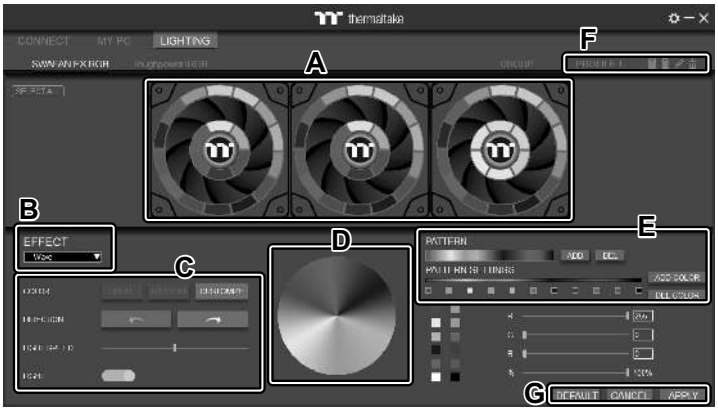

A. Preview and edit the lighting effect.
B. Select 23 Lighting Effects.
C. Lighting effect settings.
D. Color palette: select lighting color
E. PATTERN: Set up the color pattern ring.
F. Profile Settings: New, Copy, Edit, Delete
G. DEFAULT: Reset the lighting effects.
CANCEL: Deselect the LEDs for the preview screen.
APPLY: Execute and store lighting effects.

The software interface may vary with feature updates, please download the latest software version from *www.thermaltake.com*

© 2022 Thermaltake Technology Co., Ltd. All Rights Reserved.

RoHS COMPLIANT UK CA CE